


MODEL: S000593

GOLF CHIPPING NET

WARNING: THIS PRODUCT OPENS VERY QUICKLY. Start in a 5' (152cm) clear area. PEOPLE OR OBJECTS SHOULD NOT BE NEAR OBJECT WHEN OPENING. CHILDREN UNDER 12 SHOULD NOT OPEN OR CLOSE THIS PRODUCT.

OPENING & ASSEMBLING THE GOLF CHIPPING NET:

1. Be sure that a 5' (152cm) area is clear around you. Remove the Golf Chipping Net from the carton and plastic poly-bag. Hold the edge of Golf Chipping Net securely and remove the storage strap.
2. With both hands, toss the Golf Chipping Net away from you and it will open automatically.
3. Position the Golf Chipping Net with the mesh net facing towards you. Attach the four hook and loop tapes to secure the inner target.
4. Place the Golf Chipping Net with the nylon ball catch near the ground and you're ready to practice hitting and chipping.

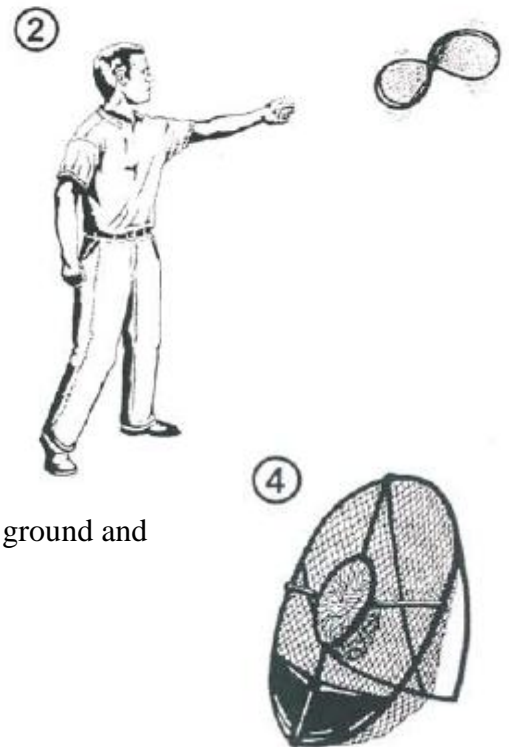

CLOSING THE GOLF CHIPPING NET:

5. Disengage the inner target and set it aside.
6. Grasp both sides of the Golf Chipping Net.
7. Twist one hand away from you to form a "figure 8" with the frame.
8. Fold the "figure 8" in half by bringing your hands together and grasping both sides of the Golf Chipping Net firmly, so the Golf Chipping Net won't snap open.
9. Place the inner target in the center of the folded Golf Chipping Net.
10. Wrap the storage strap around the Golf Chipping Net.



INSTRUCTIONS FOR USE:

POSITION OF PRODUCT

We recommend extreme caution when using this product indoors. While indoors, practice only in open 10' x 10' (304cm x 304cm) spaces, not on hard surfaces or near furniture, walls, posts or beams.

NEVER hit a ball if a person is standing between you and the product. **WATCH OUT FOR CHILDREN AT ALL TIMES.**

PRACTICING GOLF SHOTS

Distance from the Golf Chipping Net depends on the type of shot you are practicing. Recommended distance of 10 feet (304cm) to 50 yards (380cm) should be appropriate for practicing your short game.

To prolong the life of the product, fold the Golf Chipping Net and store in an area protected from moisture, wind and rain. There is NO warranty for deterioration due to natural factors.

Action Sports Equipment Pty Ltd.

Freecall: 1800 465 070 (Australia)

Standard Call: 09 477 6020 (New Zealand)